

CONEL Ltd.

2140, Ботевград, ул. "Бенковски" 27 /партер/

conel-m@botevgrad.com



Layout Keys	TV set	
	HARMAN KARDON AVR700_8611	
	Function's	Shift
POW	PowerOff	PowerOff
1	1	HDMI1
2	2	HDMI2
3	3	HDMI3
4	4	VID1
5	5	VID2
6	6	VID3
7	7	T/V
8	8	USB
9	9	TAPE
-/--	Tone	TONE
0	0	AUX
P/C	AM/FM	AM/FM
VOL+	VOL+	VOL+
AV	PowerOn	PowerOn
CH+	Preset+	Preset+
VOL-	VOL-	VOL-
MUTE	MUTE	MUTE
CH-	Preset-	Preset-
MENU	Setup	Setup
EXIT	Exit/Back	Exit/Back
TEXT	TEST	TEST
TV/DTV		
BACK	CH.	CH.
UP	Up	Up
I+	OSD	OSD
LEFT	Left	Left
OK	OK	OK
RIGHT	Right	Right
....	Digital	Digital
DOWN	Dn	Dn
INFO		USB II
RED		
<<	Tun.Dn	USB <<
>	Memo	USB >
>>	Tun.Up	USB >>
<I	SURR.-	USB I<<
II>	SURR.+	USB >>I
size		
Stop		USB Stop
SLEEP	SLEEP	SLEEP
SOUND	Stereo	Stereo
PICT.	DIM	DIM

