

CONEL Ltd.

2140 Ботевград, ул.Бенковски #27 (партер)

conel-m@botevgrad.com



Layout Keys	Brand:SONY Model:RM-U204_7455
	Function's
POWER	Power
MODE	
DISP.	TV
MUTE	Mute
V+	Volume+
PRESET	Shift
P+	Preset +
V-	Volume -
DIMMER	
P-	Preset -
FUNC.	
∧	MD Play
CLEAR	Disc Skip
<	MD Prev.
OK	MD Pause
>	MD Next
>10	
V	MD Stop
T.MODE	
1	Tape A Rev.
2	Tape A Play
3	Tape A Stop
BASS	Bass Boost
4	Tape A back
5	Tape A forw.
6	
TREBLE	
7	Tape B Rev.
8	Tape B Play
9	Tape B Stop
0	
TIMER	Sleep
CLOCK	
REP.	
SHUFF.	
REC.	
PLAY	PlayCD
STOP	Stop CD
PAUSE	Pause CD
FAST REWIND	I<< CD
FAST FORWARD	>>I CD
REWIND	Tape B back
FORWARD	Tape B forw.
RED/CD	CD
GREEN/TAPE	MD/Tape
YELL./AUX	Video
BLUE/Tuner	Tuner

